## Electra ARF Instruction and Operation Manual

## **BVM Electra ARF**

## **RADIO CONTROL COMPONENTS**

CONTROLS	QTY	SERVO TYPE	QTY			LEAD EXT
			Fuse	Tail	Wing	
Ailerons	2	JR 3711 HV	2			24"
					2	6"
Elevators	2	JR 3711 HV or DS821 HV	2			24"
Rudder	1	JR 3711 HV	1			36"
Nose Steering	1	DS821 HV* JR 9411 HV	1			12"
Flaps	2	JR 9411 HV or DS821 HV	2			24"
Battery	1	Duralite Mag-lon 2 cell 1500 mAh				

NOTE: Updated January 28, 2016

This configuration utilizes an 11 channel radio. If less channels are available, y-harnesses can be used accordingly.

NOTE: IF EQUIPMENT OTHER THAN JR IS USED, CONSULT THAT MANUFACTURER FOR SIMILAR COMPONENTS.

\* DS 821 HV must be shimmed up from tray to clear fuselage bottom.

**NOTE:** As of 2015, most of these components are obsolete and not available. Consult your R/C manufacture for current and equivalent components. High voltage systems are now prevalent.