

**BobCat Composite**  
ASSEMBLY & OPERATION MANUAL

## BVM BobCat Composite RADIO CONTROL COMPONENTS

CONTROLS	QTY	SERVO TYPE	QTY			LEAD EXT
			Fuse	Booms	Wing	
						<b>ALL HD</b>
Ailerons	2	JR 821 or 8411	2			18"
					2	12"
Elevators	1	JR 8611A		1		36"
			1			18"
Rudders	2	JR 3301 or 9411		1		18"
				1 (stab)		24"
			1			12"
				1		"Y" Harness**
Nose Steering	1	JR 821	1			"Y" Harness**
Retract Valve	1	JR 351				N/A
Flaps	1	JR 8411	1			Match Box
	1	JR 8411R	2			18"
					2	6"
Smooth Stop (optional)	1	JR 351				N/A
Battery	1	Spektrum 3000 MAH				
	1	Spektrum Volt Regulator				
Battery wire harness	1	EC3 "y" to 2 JR				

NOTE: IF EQUIPMENT OTHER THAN JR IS USED, CONSULT THAT MANUFACTURER FOR SIMILAR COMPONENTS.

\*\* JR Y-harness HD (JRPA135)

JR Heavy Duty servo arm to be used on elevator (comes standard with 8611A servo).

Optional: JR "MatchMaker" (#JRPA915) is very handy.  
For Bench set-up