

Ultra Bandit Instruction and Operation Manual




- Disassemble all parts and paint to suit. Inside of canopy framework should be sprayed flat black. Take care to keep paint off of outside (factory) finish. Instrument panels and side consoles can be painted light gray, giving a nice contrast to black framework after clear canopy is installed.



- The front and rear instrument panels are from the same mold and identical until trimmed and adorned as described here. The front panel must be notched in the lower corners as shown to fit over the side panels. Then attach the "Heads up console". See also photos on next page.

- Trim the clear Mylar instrument "gauges" as close as possible around instruments.
- Peel backing paper from white vinyl backer and lay on clean table, sticky-side up. Press instrument Mylar "face up" onto white vinyl.

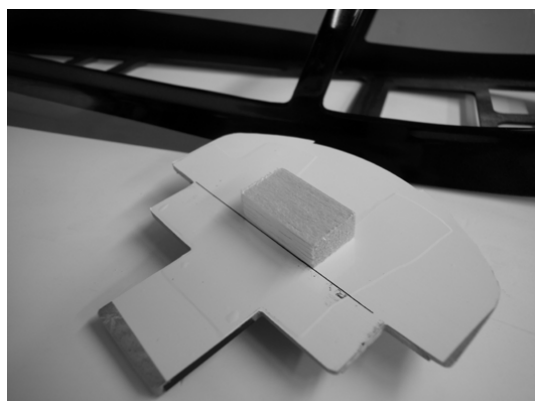

- Carefully align instrument panel (after painting!) over Mylar gauges. Press to firmly attach to vinyl backer sheet. Trim excess vinyl around edge of panel. Attach balsa block (screw is optional).


Ultra Bandit Instruction and Operation Manual

CLEAR CANOPY

- ❑ Canopy is installed in 2 pieces. Cut-lines are molded in. Cut canopy carefully and smooth cut edges with scuff board.
- ❑ Test fit each part into framework. Use ZAP 5-min epoxy or canopy glue to install front section first. Work slowly, gluing small sections, until done. Small “clothespins” from a craft store are very handy for holding clear canopy in place. ZAP-A-GAP could also be used to tack glue the clear plastic in a few places, then apply canopy glue.

RE-ASSEMBLY

- ❑ Secure pilots into tub against seats with “Velcro” seat belts. Loop the Velcro through slots in plastic tub.

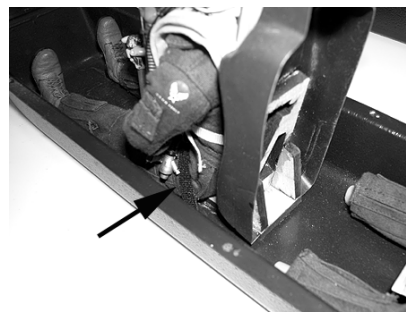

- ❑ Slide front and rear instrument panels shields into position and secure with ZAP-A-GOO to plywood framework.



Forward Instrument Panel



Rear Instrument Panel

- ❑ Trim side consoles to length to fit and paint to suit. Light gray makes the side panels visible from the outside. Scuff the bottom of each side panel and glue into place with ZAP-A-GOO.
- ❑ Install control stick in front cockpit. Install headrests and drogue pack to tops of both seats.

